LUBRICATION ORDER LO 10-3930-633-12

10 February 84

(Supersedes LO 10-3930-633-12, 29 MAY 1975)

TRACTOR, WHEELED, WAREHOUSE; GASOLINE, 4-WHEEL, PNEUMATIC TIRED; 4000 LB DBP (CLARK EQUIPMENT MODEL 2330237, ARMY MODEL MHE-228) (NSN 3930-00-347-6173)

Reference: TM 10-3930-633-12 and FEDERAL SUPPLY CATALOG C9100-IL.

Hard time intervals and the related manhour times are based on normal operation. The man-hour time specified is the time you need to do all the services prescribed for a particular interval. Change the hard time interval if your lubricants are contaminated or if you are operating the equipment under adverse operating conditions, including longerthan-usual operating hours. The hard time interval may be extended during periods of low activity. If extended, adequate preservation precautions must be taken.

WARNING

Dry cleaning fluid is flammable. Do not use near a flame or excessive heat. Use only with adequate ventilation. Avoid prolonged breathing of vapors and minimize skin contact. Clean parts or fittings with dry cleaning solvent (SD), Type II or equivalent. Dry before lubricating. Dotted arrow shafts indicate lubrication on both sides of equipment. A dotted circle indicates a drain below. Relubricate all items found contaminated after fording or washing.

The lowest level of maintenance authorized to lubricate a point is indicated by one of the following symbols as appropriate: Operator/Crew (C); and Organizational Maintenance (O).


Reporting errors and recommending improvements. You can help improve this manual. If you find any mistakes, or if you know of a way to improve the procedures, please let us know. Mail your letter or DA Form 2028 (Recommended Changes to Publications and Blank Forms) direct to: Commander, US Army Tank-Automotive Command, ATTN: DRSTA-MB, Warren, MI 48090. A reply will be furnished to you.

*The time specified is the time required to perform all services at the particular interval.

	AN-HOURS	*TOTAL MAN-HOURS		
INTERVAL	MAN-HOURS	INTERVAL	MAN-HOURS	
10 100 250	0.8 1.5 1.0	500	2.3	

INTERVAL • LUBRICANT


LUBRICANT • INTERVAL

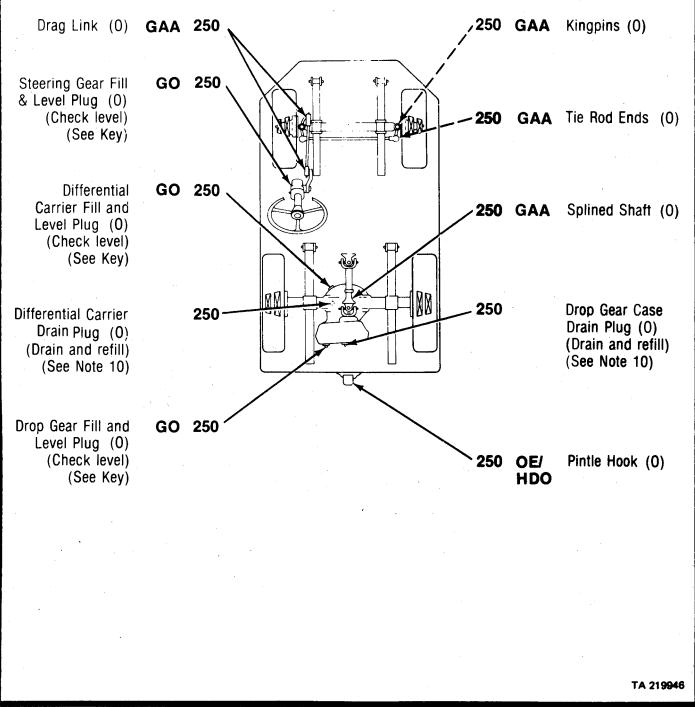

LO 10-3930-633-12

INTERVAL • LUBRICANT

LUBRICANT • INTERVAL

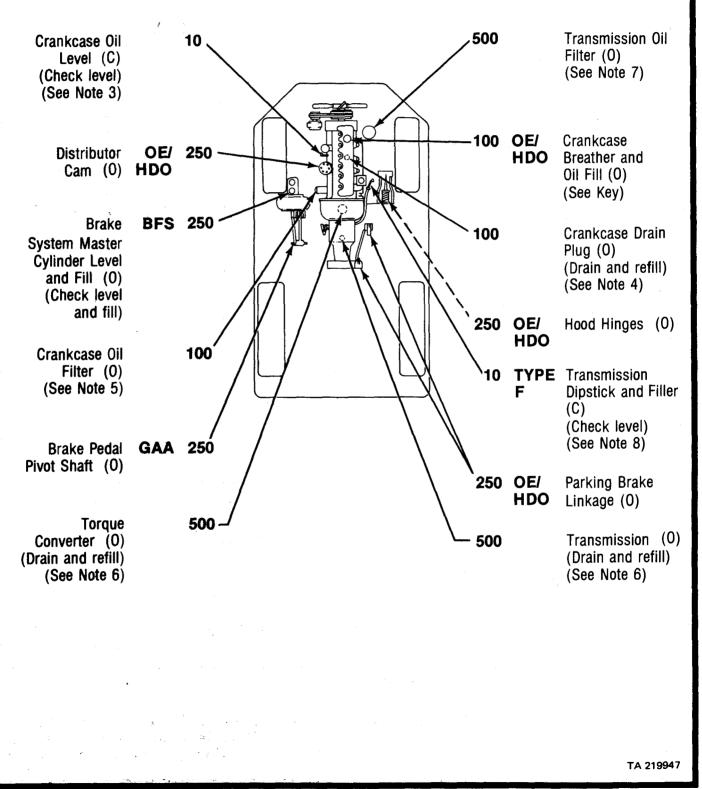

LO 10-3930-633-12

CARD 3 OF 5

· _* KEY						
		EXPECTED TEMPERATURES Above + 15°F + 40°to -15°F + 40°to -65°F				
LUBRICANTS	CAPACITY			+ 40 to -65 F (+ 4°to -54°C)		INTERVALS
OE/ - Lubricating HDO Oil, Internal Combustion Engine, Tac- tical Service		OE/HDO 30	OE/H_.DO 10			
OEA - Lubricating Oil, Internal Combustion, Arctic				OEA (See Note 1)	-207	
 Crankcase w/Filter Oil Can Points (See Note 2) 	6 qts. (5.6 L)				refer to FM 9.	Intervals given are in hours
GO - Lubricating Oil, Gear Multipurpose		GO 85W/140	GO 80W/90	GO 75W	operation r	of normal operation.
- Differential Drop Gear	10 qts. (9.4 L)				Arctic o	
BFS - Brake Fluid, Silicone, Automotive - Brake System Master	1 pt. (0.473 L)					
Cylinder						
TYPE - Automatic F Transmission Fluid		ALL TEMPERATURES				
- Transmission and Converte	-					
GAA - Grease, Automotive and Artillery		AL	L TEMPERATU	JRES		
*See Note 10 for lubricant specification number. NOTES: 1. FOR OPERATION OF EQUIPMENT IN PROTRACTED COLD TEMPERATURES BELOW -15°F (-26°C). Remove lubricants DELOW -15°F (-26°C). Remove lubricants BELOW -15°F (-26°C). Remove lubricants CARD 4 OF						

NOTES - CONTINUED:

-15°F (-26°C). If OEA lubricant is required to meet the temperature ranges prescribed in the Key, OEA lubricant is to be used in place of OE/HDO-10 lubricant for all temperature ranges where OE/HDO-10 is specified in the Key.

2. OIL CAN POINTS. Each 250 hours clean and lightly coat hood hinges, latch, pintle hook, carburetor and accelerator linkage and all exposed adjusting threads with OE/HDO.

3. ENGINE OIL LEVEL HOT OR COLD CHECK. Check engine, oil level should be at high mark on dipstick. Hot engine, oil level must be between high and low marks on dipstick (allow to set 5 minutes before checking).

4. ENGINE. Oil is to be changed each 100 hours. Drain when lubricant is warm.

5. ENGINE OIL FILTER. Each 100 hours, remove filter, clean filter mount, install new filter. After installing new filter, fill crankcase, operate engine for 5 minutes, check housing for leaks, check crankcase oil level and bring to "FULL" mark.

6. TRANSMISSION AND TORQUE CON-VERTER. Check level each 10 hours with engine running at idle speed, oil at operating temperature and transmission in neutral. Maintain oil level at "FULL" mark. Change oil each 500 hours. Fill transmission to "LOW" mark. Run engine at idle speed to fill converter and lines. With engine running at idle speed, oil at operating temperature and transmission in neutral, add oil to bring oil level to "FULL" mark. Operate for 5 minutes and check for leaks.

7. TRANSMISSION OIL FILTER. Each 500 hours, remove filter, clean filter mount and install new filter and seal. Fill transmission to low mark. With engine running at idle speed, oil at operating temperature and transmission in neutral, add oil to bring oil level to "FULL" mark. Operate for 5 minutes and check filter for leaks. 8. AUTOMATIC TRANSMISSION. Transmission uses only Type "F" Automatic Transmission Fluid NSN 9150-00-843-1636 (1 Gal. can.)

9. DIFFERENTIAL/DROP GEARCASE. Change oil each 250 hours. After refill, operate for five minutes, check for leaks and bring oil level to fill and level plug opening:

10. LUBRICANTS. The following is a list of lubricants with military symbols and applicable specification numbers

OE/HDO	MIL-L-2104
GO	MIL-L-2105
GAA	MIL-G-10924
OEA	MIL-L-46167
BFS	MIL-B-46176
(SD), Type II	P-D-680
Type F	C1A2-19582-C

Copy of this Lubrication Order will remain with the equipment at all times, instructions contained herein are mandatory.

By order of the Secretary of the Army:

JOHN A. WICKHAM, JR. General, United States Army Chief of Staff

OFFICIAL:

ROBERT M. JOYCE Major General, United States Army The Adjutant General

DISTRIBUTION:

To be distributed in accordance with DA Form 12-256, Operator and Organizational maintenance requirements for Tractor.

☆U.S. GOVERNMENT PRINTING OFFICE: 1984-420-903/218

This fine document...

Was brought to you by me:



Liberated Manuals -- free army and government manuals

Why do I do it? I am tired of sleazy CD-ROM sellers, who take publicly available information, slap "watermarks" and other junk on it, and sell it. Those masters of search engine manipulation make sure that their sites that sell free information, come up first in search engines. They did not create it... They did not even scan it... Why should they get your money? Why are not letting you give those free manuals to your friends?

I am setting this document FREE. This document was made by the US Government and is NOT protected by Copyright. Feel free to share, republish, sell and so on.

I am not asking you for donations, fees or handouts. If you can, please provide a link to liberatedmanuals.com, so that free manuals come up first in search engines:

<A HREF=<u>http://www.liberatedmanuals.com/</u>>Free Military and Government Manuals

Sincerely
 Igor Chudov
 http://igor.chudov.com/