

REPORT NUMBER 103-GTL-06-003

**SAFETY COMPLIANCE TESTING FOR
FMVSS NO. 103
WINDSHIELD DEFROSTING AND
DEFOGGING SYSTEMS**

**FORD MOTOR CO.
2006 FORD FUSION, PASSENGER CAR
NHTSA NO. C60202**

**GENERAL TESTING LABORATORIES, INC.
1623 LEEDSTOWN ROAD
COLONIAL BEACH, VIRGINIA 22443**



JUNE 16, 2006

FINAL REPORT

PREPARED FOR

**U. S. DEPARTMENT OF TRANSPORTATION
NATIONAL HIGHWAY TRAFFIC SAFETY ADMINISTRATION
ENFORCEMENT
OFFICE OF VEHICLE SAFETY COMPLIANCE
400 SEVENTH STREET, SW
ROOM 6111 (NVS-220)
WASHINGTON, D.C. 20590**

This publication is distributed by the U.S. Department of Transportation, National Highway Traffic Safety Administration, in the interest of information exchange. The opinions, findings and conclusions expressed in this publication are those of the author(s) and not necessarily those of the Department of Transportation or the National Highway Traffic Safety Administration. The United States Government assumes no liability for its contents or use thereof. If trade or manufacturers' names or products are mentioned, it is only because they are considered essential to the object of the publication and should not be construed as an endorsement. The United States Government does not endorse products or manufacturers.

Prepared By: *Debbie Mussic*
Approved By: *Sean O'Connell*
Approval Date: *6/16/06*

FINAL REPORT ACCEPTANCE BY OVSC:

Accepted By: *John Ferrerani*
Acceptance Date: *6/16/06*

1. Report No. 103-GTL-06-003		2. Government Accession No. N/A		3. Recipient's Catalog No. N/A	
4. Title and Subtitle Final Report of FMVSS 103 Compliance Testing of 2006 FORD FUSION, PASSENGER CAR NHTSA No. C60202				5. Report Date June 16, 2006	
				6. Performing Organ. Code GTL	
7. Author(s) Grant Farrand, Project Engineer Debbie Messick, Project Manager				8. Performing Organ. Rep# GTL-DOT-06-103-003	
9. Performing Organization Name and Address General Testing Laboratories, Inc. 1623 Leedstown Road Colonial Beach, Va 22443				10. Work Unit No. (TRAIS) N/A	
				11. Contract or Grant No. DTNH22-01-C-11025	
12. Sponsoring Agency Name and Address U.S. Department of Transportation National Highway Traffic Safety Admin. Enforcement Office of Vehicle Safety Compliance (NVS-220) 400 7 th Street, S.W., Room 6111 Washington, DC 20590				13. Type of Report and Period Covered Final Test Report May 22-23, 2006	
				14. Sponsoring Agency Code NVS-220	
15. Supplementary Notes					
16. Abstract Compliance tests were conducted on the subject, 2006 Ford Fusion Passenger Car in accordance with the specifications of the Office of Vehicle Safety Compliance Test Procedure No. TP-103-13 for the determination of FMVSS 103 compliance. Test failures identified were as follows: None					
17. Key Words Compliance Testing Safety Engineering FMVSS 103			18. Distribution Statement Copies of this report are available from NHTSA Technical Information Services (TIS) Room 2336 (NP0-405) 400 7 th St., S.W. Washington, DC 20590 Telephone No. (202) 366-4947		
19. Security Classif. (of this report) UNCLASSIFIED		21. No. of Pages 34		22. Price	
20. Security Classif. (of this page) UNCLASSIFIED					

TABLE OF CONTENTS

SECTION		PAGE
1	Purpose of Compliance Test	1
2	Compliance Test Procedure and Results Summary	2
3	Compliance Test Data	4
4	Test Equipment List	8
5	Photographs	9
	5.1 Left Side View of Vehicle	
	5.2 Right Side View of Vehicle	
	5.3 $\frac{3}{4}$ Frontal View From Left Side of Vehicle	
	5.4 $\frac{3}{4}$ Rear View From Right Side of Vehicle	
	5.5 Vehicle Certification Label	
	5.6 Vehicle Tire Information Label	
	5.7 Close-up View of Defroster Control Setting on Dash	
	5.8 Instrumentation Set-up	
	5.9 Windshield, Pre-Test Frosted State Test #1	
	5.10 Defrosted Area at 20 minutes Test #1	
	5.11 Windshield Vellum Pattern, Test #1	
	5.12 Windshield Pre-Test Frosted State Test #2	
	5.13 Defrosted Area at 20 minutes Test #2	
	5.14 Defrosted Area at 25 minutes Test #2	
	5.15 Windshield Vellum Pattern, Test #2	
6	Copy of Owner's Manual Defroster Instructions	25

SECTION 1

PURPOSE OF COMPLIANCE TEST

1.0 PURPOSE OF COMPLIANCE TEST

A 2006 Ford Fusion Passenger Car was subjected to Federal Motor Vehicle Safety Standard (FMVSS) No. 103 testing to determine if the vehicle was in compliance with the requirements of the standard. All tests were conducted in accordance with NHTSA, Office of Vehicle Safety Compliance (OVSC) Laboratory Procedure, TP-103-13 dated 26 June 1996 and General Testing Laboratories, Inc. (GTL) Test Procedure, "Windshield Defrosting and Defogging Systems – Passenger Vehicles, Multpurpose Vehicles, Trucks and Buses".

1.1 TEST VEHICLE

The test vehicle was a 2006 Ford Fusion Passenger Car. Nomenclature applicable to the test vehicle are:

A. Vehicle Identification Number: 3FAFP06Z56R135176

B. NHTSA No.: C60202

C. Manufacturer: FORD MOTOR COMPANY

D. Manufacture Date: 12/05

1.2 TEST DATE

The test vehicle was subjected to FMVSS No. 103 testing on May 22-23, 2006.

SECTION 2

COMPLIANCE TEST PROCEDURE AND SUMMARY OF RESULTS

2.0 GENERAL

The 2006 Ford Fusion 4-door passenger car, NHTSA No. C60202 was subjected to FMVSS No. 103 tests on May 22-23, 2006. Photographs of the test vehicle are shown in Figures 5.1 through 5.4. The manufacturer's certification and tire information labels are shown in Figures 5.5 and 5.6. The test instrumentation and instrument panel setups are depicted in Figures 5.7 and 5.8. Figures 5.9 through 5.15 depict the windshield pre and post test defrost conditions.

2.1 TEST PROCEDURE

Prior to test the test vehicle was inspected for completeness, systems operability, and appropriate fuel and liquid levels, i.e., oil and coolant to include antifreeze protection. The vehicle was then photographically documented as required by the DOT/NHTSA test procedure. The windshield patterns for areas A, B and C had been furnished prior to testing and these areas were outlined on the windshield with a marker. The vehicle was then installed in the cold chamber and pre-conditioned for a 14-hour minimum, $0^{\circ} \pm 5^{\circ}$ F temperature soak for the first test run. After the pre-condition, the hood was raised to assure engine coolant and lubricant were stabilized within the test temperature range for a minimum of 2 hours.

At the end of the 2-hour minimum stabilization period, the entire windshield was sprayed evenly with 0.010 ounces of water per square inch of glass area. Refer to Section 3, Compliance Test Data, for test specifics such as total amount of water sprayed, spray gun identification, and air pressure regulation. The vehicle soak continued for an additional 30 minutes minimum but no more than 40 minutes after the windshield was sprayed.

At the conclusion of the additional soak time the vehicle's engine was started and operated at a target speed of 1500-1600 rpm or at the manufacturer's specification if different as noted on data sheets. The defroster blower was turned on to the high speed setting with the heater selector in the de-ice (defrost) position, and the temperature control in the maximum temperature position. All doors and windows were closed. The heater air intake was fully open and the vehicle's hood closed. At no time during the test were the windshield wipers used.

SECTION 2 continued

At start of testing and during test, at each 5-minute interval after engine start, cold chamber, engine coolant, heater coolant in and defroster air left/defroster air right temperatures were recorded. Likewise at each 5-minute interval the boundary of the defrosted area was marked on the inside surface of the windshield. The test was run for a maximum of 40 minutes from engine start, or until such time as 100 percent windshield clearance was achieved. Photographs were made of the windshield at the pre-test frosted state and 20-minute and 25-minute intervals. Post test actions included placing a vellum pattern on the windshield and tracing the windshield's 5-minute interval defrosted area boundary lines onto the vellum pattern.

After the traces were obtained, the windshield was again thoroughly cleaned and the vehicle engine coolant and lubricant stabilization period at $0^{\circ} \pm 5^{\circ}$ F temperature commenced for a repeat of the procedure discussed. The windshield patterns for both tests were used subsequently to determine the cleared area percentages.

2.2 SUMMARY OF RESULTS

Based on the test performed, the test vehicle appears to be in compliance with the requirements of FMVSS 103.

SECTION 3

COMPLIANCE TEST DATA

3.0 TEST RESULTS

The following data sheets document the results of testing on the 2006 Ford Fusion.

SUMMARY DATA SHEET
FMVSS 103, WINDSHIELD DEFROSTING AND DEFOGGING SYSTEMS

VEH. MOD YR/MAKE/MODEL/BODY: 2006 FORD FUSION PASSENGER CAR
 VEH. NHTSA NO: C60202; VIN: 3FAFP06Z56R135176
 VEH. BUILD DATE: 12/05 TEST DATE: MAY 22-23, 2006
 TEST LABORATORY: GENERAL TESTING LABORATORIES
 OBSERVERS: GRANT FARRAND, JIMMY LATANE

WINDSHIELD AREA: 1968 in² AREA C = 262.2 in² AREA D = 262.2 in² AREA A = 1128.9 in²

MANUFACTURER'S WINDSHIELD PATTERN USED: Yes X No _____

ENGINE THERMOSTAT NOMINAL REGULATING TEMPERATURE: 180 °F

HEATER-DEFROSTER SYSTEM INCLUDES AIR CONDITIONER: YES X NO _____

DESCRIBE UNUSUAL FEATURES OF DEFROSTING SYSTEM: NONE

DESCRIBE UNUSUAL FEATURES OF TEST CAR: NONE

DESIGNATION	AREA PERCENT DEFROSTED					
	TEST 1	TEST 2	AVG	REQ'D	PASS	FAIL
CRITICAL AREA C AT 20 MINUTES	100%	100%	100%	80% MINIMUM	PASS	
PASSENGER AREA D AT 25 MINUTES	100%	100%	100%	80% MINIMUM	PASS	
TOTAL AREA A AT 40 MINUTES	100%	100%	100%	95% MINIMUM	PASS	

REMARKS:

RECORDED BY: G. FARRAND

DATE: 05/23/06

APPROVED BY: D. MESSICK

FMVSS 103 TEST DATA RECORD – TEST RUN NO. 1

VEH. MOD YR/MAKE/MODEL/BODY: 2006 FORD FUSION PASSENGER CAR
 VEH. NHTSA NO: C60202; VIN: 3FAFP06Z56R135176
 VEH. BUILD DATE: 12/05; TEST DATE: MAY 22-23, 2006
 TEST LABORATORY: GENERAL TESTING LABORATORIES
 OBSERVERS: GRANT FARRAND, JIMMY LATANE

If 1st Test Run, chamber conditioned 72 hours @ 0° ±5° F (14 hrs. min.)

Cold Soak Period: 72 HOURS

Time engine coolant and lubricant remained stabilized at 0° F: 60 hrs. 0 minutes

Water Spray Gun and Nozzle Type: BINKS #66

Spray Gun Pressure: 50 psi (50 psi ± 3 psi)

Water used: 19.7 fluid oz. (0.010 ounces per square inch of windshield area)

Soak Period Between Ice Application and Test Start: 35 minutes (30 to 40 minutes)

Engine Speed: * (Target engine speed 1500 to 1600 rpm)

* 1600 RPM FOR FIRST 5 MINUTES THEN 1500 RPM

Wind at specified location in front of windshield: .4 mph (0 to 2 mph)

Number of Vehicle Occupants: 1 (2 maximum)

Describe window openings, if any: NONE

TIME FROM START (minutes)	MOTOR VOLTAGE (volts)	TEMPERATURE, °F					DEFROSTED AREA, %		
		TEST ROOM	ENGINE WATER	HEATER WATER IN	DEFROSTER AIR		A	C	D
					DRVR	PSGR			
0	13.5	-4.0	-4.0	-4.0	-4.0	-4.0	0%	0%	0%
5	14.7	-4.0	-3.8	103.6	75.5	77.4	2.7%	0%	0%
10	14.7	-1.2	-2.3	133.7	107.5	107.4	47.3%	45.3%	49.5%
15	14.7	0.6	8.4	151.1	124.8	124.6	88.7%	99.0%	99.7%
20	14.7	2.7	22.3	157.0	132.9	133.1	100%	100%	100%

REMARKS:

RECORDED BY: G. FARRAND

DATE: 05/23/06

APPROVED BY: D. MESSICK

FMVSS 103 TEST DATA RECORD – TEST RUN NO. 2VEH. MOD YR/MAKE/MODEL/BODY: 2006 FORD FUSION PASSENGER CARVEH. NHTSA NO: C60202; VIN: 3FAFP06Z56R135176VEH. BUILD DATE: 12/05; TEST DATE: MAY 22-23, 2006TEST LABORATORY: GENERAL TESTING LABORATORIESOBSERVERS: GRANT FARRAND, JIMMY LATANEIf 1st Test Run, chamber conditioned N/A hours @ 0° ±5° F (14 hrs. min.)Cold Soak Period: 18 HOURSTime engine coolant and lubricant remained stabilized at 0° F: 12 hrs. 30 minutesWater Spray Gun and Nozzle Type: BINKS #66Spray Gun Pressure: 50 psi (50 psi ± 3 psi)Water used: 19.7 fluid oz. (0.010 ounces per square inch of windshield area)Soak Period Between Ice Application and Test Start: 35 minutes (30 to 40 minutes)Engine Speed: * (Target engine speed 1500 to 1600 rpm)

*1600 RPM FOR FIRST 5 MINUTES THEN 1500 RPM

Wind at specified location in front of windshield: .6 mph (0 to 2 mph)Number of Vehicle Occupants: 1 (2 maximum)Describe window openings, if any: NONE

TIME FROM START (minutes)	MOTOR VOLTAGE (volts)	TEMPERATURE, °F					DEFROSTED AREA, %		
		TEST ROOM	ENGINE WATER	HEATER WATER IN	DEFROSTER AIR		A	C	D
					DRVR	PSGR			
0	13.5	-4.0	-4.0	-4.0	-4.0	-4.0	0%	0%	0%
5	14.6	-4.0	-4.0	99.6	74.4	73.9	7.1%	0%	0%
10	14.7	-3.3	-2.7	132.7	107.2	107.3	43.0%	39.2%	42.1%
15	14.7	-2.6	11.5	151.3	126.3	126.3	81.8%	93.0%	96.3%
20	14.7	-1.5	22.9	157.5	132.0	131.4	99.5%	100%	100%
25	14.7	0.2	32.8	160.6	136.0	134.5	100%	100%	100%

REMARKS:

RECORDED BY: G. FARRANDDATE: 05/23/06APPROVED BY: D. MESSICK

SECTION 4
INSTRUMENTATION AND EQUIPMENT LIST

TABLE 1 - INSTRUMENTATION & EQUIPMENT LIST

EQUIPMENT	DESCRIPTION	MODEL/ SERIAL NO.	CAL. DATE	NEXT CAL. DATE
TIMER	ACCU-SPLIT	ACT2	04/06	04/07
TEMPERATURE READOUT	OMEGA	43P	04/06	04/07
TEMPERATURE RECORDER	OMEGA	CT91	04/06	04/07
SPRAY GUN	BINKS	6655	BEFORE USE	BEFORE USE
AIR VELOCITY METER	OMEGA	HHF-616	04/06	04/07
AIR PRESSURE GAGE	BINKS	0-160	05/06	05/07
SCALE	METTLER	200A4M	05/06	05/07
TACHOMETER	MONARCH	ACT-3	04/06	04/07
GRADUATED BEAKER	PHOTAX	N/A	N/A	N/A
EVENT RECORDER	COMPUTER	GEO1	BEFORE USE	BEFORE USE
DATA LOGGER	FLUKE	7471026	12/05	12/06

SECTION 5
PHOTOGRAPHS



2006 FORD FUSION
NHTSA NO. C60202
FMVSS NO. 103

FIGURE 5.1
LEFT SIDE VIEW OF VEHICLE



2006 FORD FUSION
NHTSA NO. C60202
FMVSS NO. 103

FIGURE 5.2
RIGHT SIDE VIEW OF VEHICLE



2006 FORD FUSION
NHTSA NO. C60202
FMVSS NO. 103

FIGURE 5.3
¾ FRONTAL VIEW FROM LEFT SIDE OF VEHICLE



2006 FORD FUSION
NHTSA NO. C60202
FMVSS NO. 103

FIGURE 5.4
¾ REAR VIEW FROM RIGHT SIDE VIEW OF VEHICLE

MFD. BY FORD MOTOR CO.

DATE: 12/05

GVWR: 1923KG/4240LB

FRONT GAWR: 1030KG/2270LB

REAR GAWR: 916KG/2020LB

THIS VEHICLE CONFORMS TO ALL APPLICABLE FEDERAL MOTOR VEHICLE SAFETY, BUMPER, AND THEFT PREVENTION STANDARDS IN EFFECT ON THE DATE OF MANUFACTURE SHOWN ABOVE.

VIN: 3FAFP06Z56R135176

TYPE: Passenger Car

MAXIMUM LOAD = OCCUPANTS + LUGGAGE = 385KG/ 850LB

OCCUPANTS = 5 TOTAL; 2 FRONT, 3 REAR

TIRE (FR): P205/60R16

RIMS (FR): 16X6.5J

(RR): P205/60R16

(RR): 16X6.5J

PRESSURE (FR): 235 kPa/ 34 PSI COLD (RR): 235 kPa/ 34 PSI COLD



3FAFP06Z56R135176

TRAILER TOWING - SEE OWNER GUIDE

EXT PNT: TB

RC: 27

DSO:

F0079

INT TR

TP/PS

R

AXLE

TR

SPR

6DE1F

R0074

AL

F

38

C

AA11


40A

CMC

5U5A-5420472-AA

2006 FORD FUSION
NHTSA NO. C60202
FMVSS NO. 103

FIGURE 5.5
VEHICLE CERTIFICATION LABEL

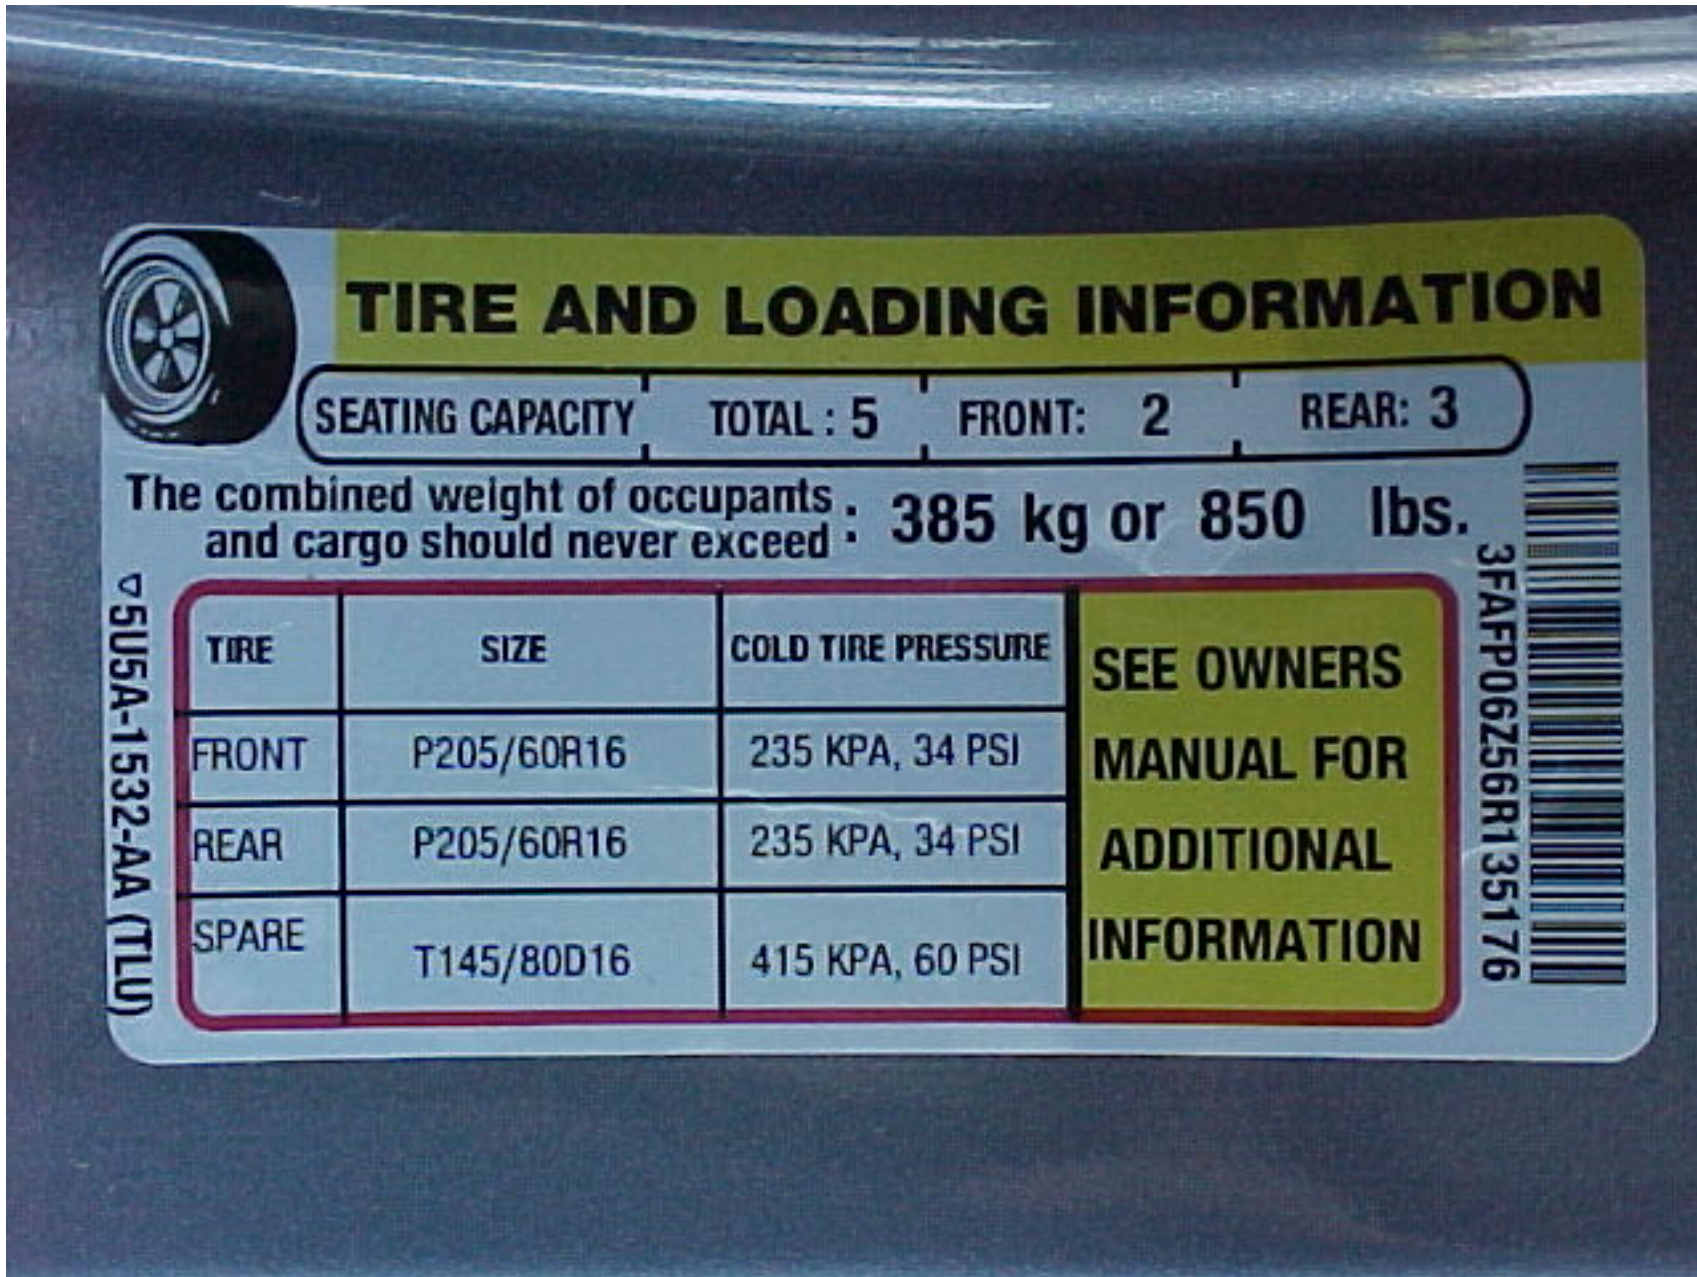

2006 FORD FUSION
NHTSA NO. C60202
FMVSS NO. 103

FIGURE 5.6
VEHICLE TIRE INFORMATION LABEL



2006 FORD FUSION
NHTSA NO. C60202
FMVSS NO. 103

FIGURE 5.7
CLOSE-UP VIEW OF DEFROSTER CONTROL SETTING
ON DASH



2006 FORD FUSION
NHTSA NO. C60202
FMVSS NO. 103

FIGURE 5.8
INSTRUMENTATION SET-UP




2006 FORD FUSION
NHTSA NO. C60202
FMVSS NO. 103

FIGURE 5.9
WINDSHIELD, PRE-TEST FROSTED STATE
TEST #1



2006 FORD FUSION
NHTSA NO. C60202
FMVSS NO. 103

FIGURE 5.10
DEFROSTED AREA AT 20 MINUTES TEST #1

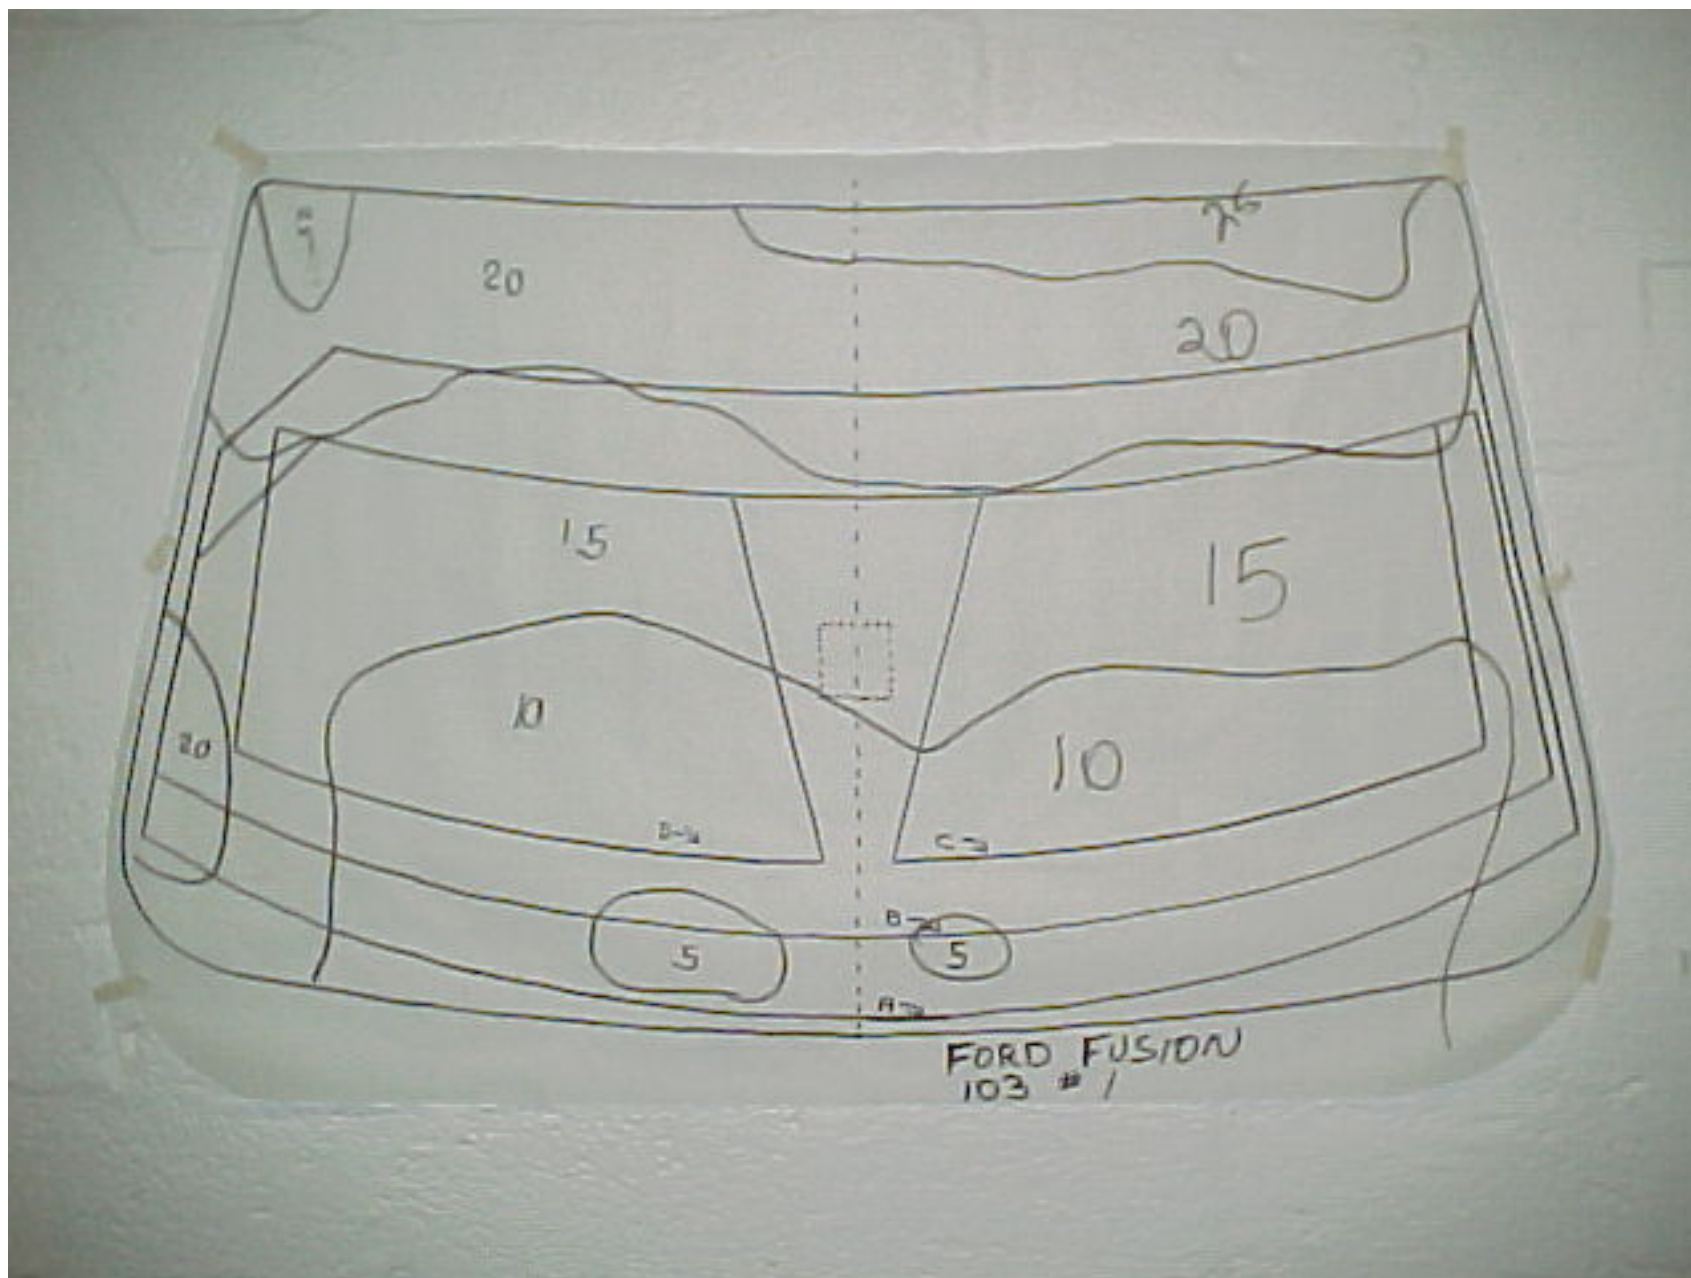

2006 FORD FUSION
NHTSA NO. C60202
FMVSS NO. 103

FIGURE 5.11
WINDSHIELD VELLUM PATTEN, POST TEST #1



2006 FORD FUSION
NHTSA NO. C60202
FMVSS NO. 103

FIGURE 5.12
WINDSHIELD PRE-TEST FROSTED STATE
TEST #2




2006 FORD FUSION
NHTSA NO. C60202
FMVSS NO. 103

FIGURE 5.13
DEFROSTED AREA AT 20 MINUTES TEST #2



2006 FORD FUSION
NHTSA NO. C60202
FMVSS NO. 103

FIGURE 5.14
DEFROSTED AREA AT 25 MINUTES TEST #2

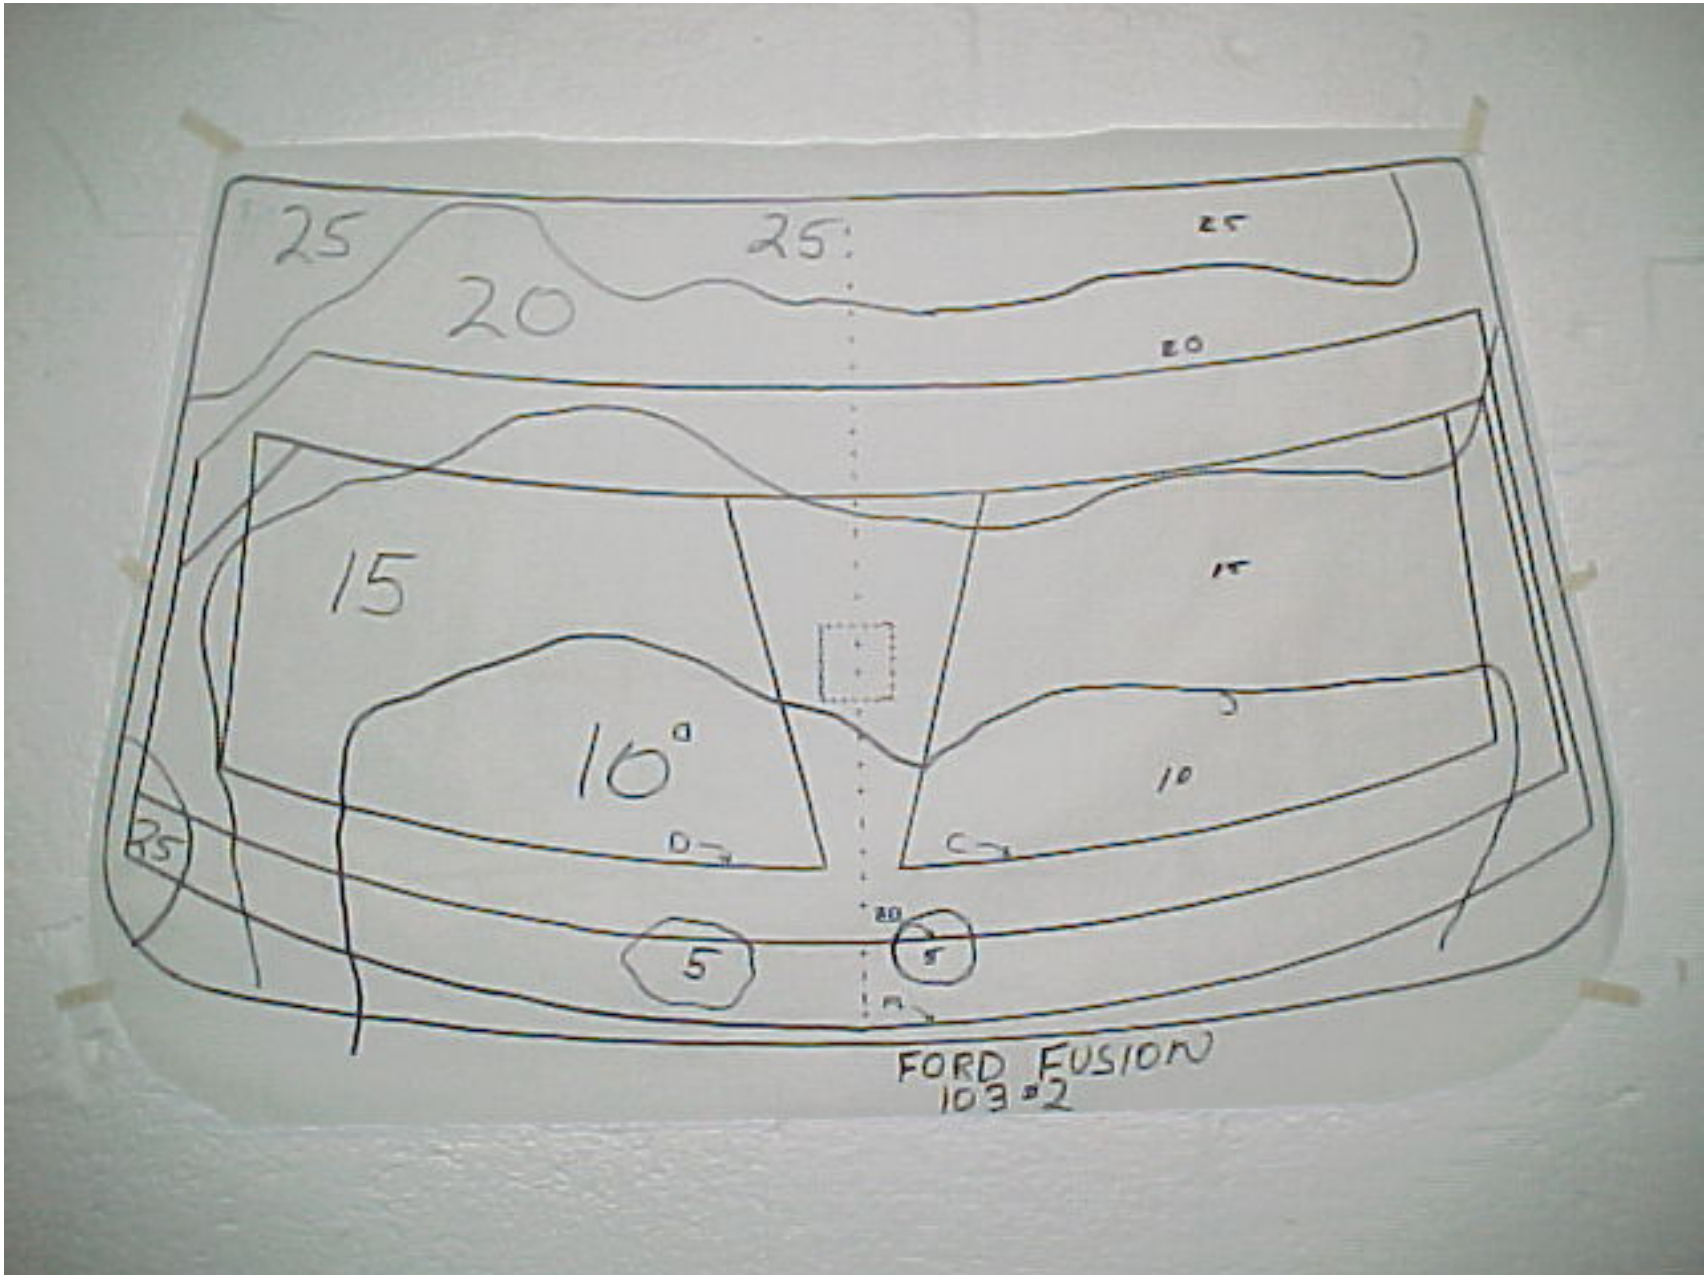

2006 FORD FUSION
NHTSA NO. C60202
FMVSS NO. 103


FIGURE 5.15
WINDSHIELD VELLUM PATTERN, POST TEST #2


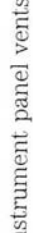






SECTION 6

OWNER'S MANUAL DEFROSTER INSTRUCTIONS

Climate Controls

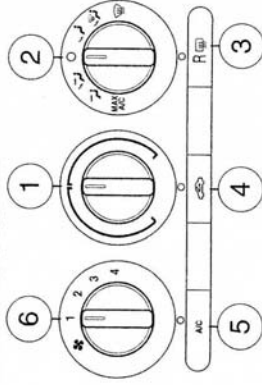MANUAL HEATING AND AIR CONDITIONING SYSTEM (IF EQUIPPED)

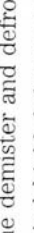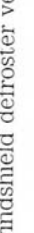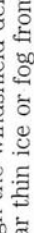


- 1. Temperature selection:** Controls the temperature of the airflow in the vehicle.
- 2. Air flow selections:** Controls the direction of the airflow in the vehicle. See the following for a brief description on each control setting:
MAX A/C: Distributes recirculated air through the instrument panel vents only to cool the vehicle. This re-cooling of the interior air is more economical and efficient. Recirculated air may also help reduce undesirable odors from entering the vehicle.
 : Distributes air through the instrument panel vents.
 : Distributes air through the instrument panel vents and floor vents.
O (OFF): Outside air is shut out and the climate system is turned off.
 : Distributes air through the floor vents. **Note:** You may notice a small amount of air flowing from the demister and defroster vents.
 : Distributes air through the windshield defroster vents, demisters and floor vents.
 : Distributes outside air through the windshield defroster and demister vents. Can be used to clear thin ice or fog from the windshield. To exit  select another mode.
- 3. Rear defroster:** Press to activate/deactivate rear window defroster. Refer to *Rear window defroster* in this section for more information.
- 4. Recirculated air:** Press to activate/deactivate air recirculation in the vehicle cabin. Recirculated air may reduce the amount of time to cool down the interior of the vehicle and may also help reduce undesired odors from reaching the interior of the vehicle. Recirculation engages automatically with selection of MAX A/C or can be engaged manually in any other airflow selection except defrost. Recirculation may turn off automatically in all airflow selections except MAX A/C.
- 5. A/C:** Press to activate/deactivate air conditioning. Use with recirculated air to improve cooling performance and efficiency. Engages automatically in MAX A/C,  (defrost) and  (floor/defrost). Cannot be disabled in MAX A/C mode.

Do not place objects on top of the instrument panel as these objects may become projectiles in a collision or sudden stop.

Climate Controls

6. **Fan speed adjustment:** Controls the volume of air circulated in the vehicle.



Manual heating and air conditioning system operating tips


- To reduce fog build up on the windshield during humid weather, place the air flow selector in the  position.
- To reduce humidity build up inside the vehicle: do not drive with the airflow selector in the O (OFF) position or with recirculated air engaged and A/C off.
- Do not put objects under the front seats that will interfere with the airflow to the back seats.
- Remove any snow, ice or leaves from the air intake area at the base of the windshield.
- To improve the A/C cool down, drive with the windows slightly open for 2-3 minutes after start up or until the vehicle has been "aired out."
- For maximum cooling performance (MAX A/C):**

In the MAX A/C mode:


- Move the temperature control selector to the coldest setting.
- Set the fan to the highest speed initially, then adjust to maintain passenger comfort.

In the  and  modes:



- Move the temperature control selector to the coldest setting.
- Select A/C and recirculated air . Use  with A/C to provide colder airflow.
- Set the fan to the highest speed initially, then adjust to maintain passenger comfort.
- To aid in side window defogging/demisting in cold weather:**





- Select .
- Select A/C.
- Set the temperature control to full heat.
- Set the fan speed to the highest setting.
- Direct the outer instrument panel vents towards the side windows.

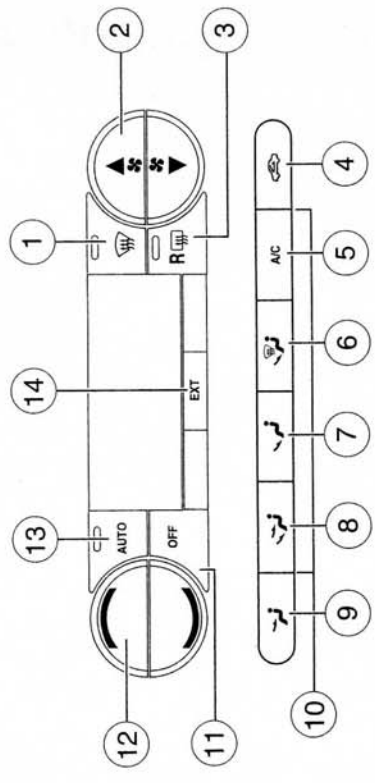AUTOMATIC TEMPERATURE CONTROL (ATC) SYSTEM (IF EQUIPPED)










Temperature conversion: To switch between Fahrenheit and Celsius: If your vehicle is equipped with a full message center, refer to *Setup menu* in the *Message center* section of the *Driver Controls* chapter for more information. If your vehicle is equipped with a mini message center, see your authorized dealer for temperature conversion.

MAX A/C setting: In order to achieve maximum cooling performance, press , A/C, , and set the temperature to 60° F (16° C) and the highest blower setting.


-  **Defrost:** Distributes outside air through the windshield defroster and demister vents. Can be used to clear thin ice or fog from the windshield. To exit  select another mode.
-  **Fan speed control:** Press to manually increase or decrease the fan speed. To return to automatic fan operation, press AUTO.
-  **Rear defroster:** Press to defrost the rear window. Refer to *Rear window defroster* in this section for more information. If your vehicle is equipped with both rear defroster and heated mirrors, the same button will activate both.

Climate Controls

4. **Recirculation control:** Press to activate/deactivate air recirculation in cabin. Recirculated air may reduce the amount of time to cool down the interior of the vehicle and may also help reduce undesired odors from reaching the interior of the vehicle. Recirculation can be engaged manually in any other airflow selection except  (defrost). Recirculation may turn off automatically in all airflow selections except MAX A/C.
5. **A/C control:** Press to activate/deactivate air conditioning. Use with recirculated air to improve cooling performance and efficiency. Engages automatically in AUTO,  (defrost) and  (floor/defrost).
6.  : Distributes air through the windshield defroster ducts, demister outlets, and the front and rear seat floor ducts. The system will automatically provide outside air to reduce window fogging.
7.  : Distributes air through the floor and rear seat floor ducts.
8.  : Distributes air through the instrument panel and center console registers (if equipped) and the front and rear seat floor ducts.
9.  : Distributes air through the instrument panel and center console registers (if equipped).
10. **Manual override controls:** Allows you to manually select where airflow is directed. To return to full automatic control, press AUTO.
11. **OFF:** Outside air is shut out and the fan will not operate.
12. **Temperature control:** Controls the temperature in the cabin of the vehicle. Press to increase/decrease the temperature.
13. **AUTO:** To engage automatic temperature control, press AUTO and select the desired temperature using the temperature control. The system will automatically determine fan speed, airflow location, A/C on or off, and outside or recirculated air, to heat or cool the vehicle to reach the desired temperature.
14. **EXT:** Press to display outside temperature. Press again to display cabin temperature settings.



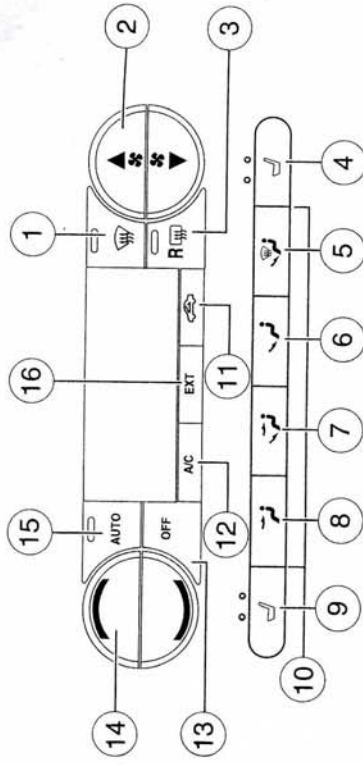


Climate Controls

Automatic Temperature Control (ATC) system with heated seats (if equipped)








Temperature conversion: To switch between Fahrenheit and Celsius: If your vehicle is equipped with a full message center, refer to *Units (Fahrenheit/Celsius)* in the *Driver Controls* chapter. If your vehicle is equipped with a mini message center, refer to *Mini message center electronic compass temperature display* in the *Driver Controls* Chapter.

MAX A/C setting: In order to achieve maximum cooling performance, press , A/C, , and set the temperature to 60° F (16° C) and the highest blower setting.



1.  **Defrost:** Distributes outside air through the windshield defroster and demister vents. Can be used to clear thin ice or fog from the windshield. To exit  select another mode.
2.  **Fan speed control:** Press to manually increase or decrease the fan speed. To return to automatic fan operation, press AUTO.
3.  **Rear defroster:** Press to defrost the rear window. Refer to *Rear window defroster* in this section for more information. If your vehicle is equipped with both rear defroster and heated mirrors, the same button will activate both.
4.  **Passenger heated seat control:** Press to heat the passenger seat. Press once to activate high heat (two indicator lights). Press again to activate low heat (one indicator light). Press again to deactivate the



Climate Controls

passenger heated seat. **Note:** The passenger heated seat will turn off automatically after 15 minutes of use.

5.  : Distributes air through the windshield defroster ducts, demister outlets, and the front and rear seat floor ducts. The system will automatically provide outside air to reduce window fogging.
6.  : Distributes air through the floor and rear seat floor ducts.
7.  : Distributes air through the instrument panel and center console registers (if equipped) and the front and rear seat floor ducts.
8.  : Distributes air through the instrument panel and center console registers (if equipped).
9.  **Driver heated seat control:** Press to heat the driver seat. Press once to activate high heat (two indicator lights). Press again to activate low heat (one indicator light). Press again to deactivate the driver heated seat. **Note:** The driver heated seat will turn off automatically after 15 minutes of use.

10. **Manual override controls:** Allows you to manually select where airflow is directed. To return to full automatic control, press AUTO.

11.  **Recirculation control:** Press to activate/deactivate air recirculation in cabin. Recirculated air may reduce the amount of time to cool down the interior of the vehicle and may also help reduce undesired odors from reaching the interior of the vehicle. Recirculation can be engaged manually in any other airflow selection except  (defrost). Recirculation may turn off automatically in all airflow selections except MAX A/C.

12. **A/C control:** Press to activate/deactivate air conditioning. Use with recirculated air to improve cooling performance and efficiency. Engages automatically in AUTO,  (defrost) and  (floor/defrost).

13. **OFF:** Outside air is shut out and the fan will not operate.



14. **Temperature control:** Press to increase/decrease the temperature. in the vehicle cabin.

15. **AUTO:** To engage automatic temperature control, press AUTO and select the desired temperature using the temperature control. The system will automatically determine fan speed, airflow location, A/C on or off, and outside or recirculated air, to heat or cool the vehicle to reach the desired temperature.


16. **EXT:** Press to display outside temperature. Press again to display cabin temperature settings.

Climate Controls



Automatic Temperature Control (ATC) system operating tips

- To reduce fog build up on the windshield during humid weather, place the air flow selector in the  position.
- To reduce humidity build up inside the vehicle, do not drive with the system OFF, or with recirculated air  engaged and A/C off.
- Do not put objects under the front seats that will interfere with the airflow to the back seats.
- Remove any snow, ice or leaves from the air intake area at the base of the windshield.
- To improve the A/C cool down, drive with the windows slightly open for 2-3 minutes after start up or until the vehicle has been "aired out."
- **For maximum cooling performance (MAX A/C):**

Automatic operation:

- Press AUTO for full automatic operation.
- Do not override A/C or  (recirculated air).
- Set the temperature to 60° F (16° C).


Override operation:

- Select air distribution.
- Select A/C and  (recirculated air). Use  (recirculated air) with A/C to provide colder airflow.
- Set the temperature to 60° F (16° C).
- Set highest fan speed initially, then adjust to maintain comfort.

In MAX A/C setting:


- Move the temperature control to full cold.
- Set highest fan speed initially, then adjust to maintain comfort.

In (panel) or (panel/floor) modes:

- Move temperature control to full cold.
- Select A/C and  (recirculated air). Use recirculated air with A/C to provide colder airflow.
- Set highest fan speed initially, then adjust to maintain comfort.

Climate Controls

- **To aid in side window defogging/demisting in cold weather:**

1. Select .
 2. Select A/C.
 3. Adjust the temperature control to maintain comfort.
 4. Set the fan speed to the highest setting.
 5. Direct the outer instrument panel vents towards the side windows.
- To increase airflow to the outer instrument panel vents, close the vents located in the middle of the instrument panel.

 Do not place objects on top of the instrument panel as these objects may become projectiles in a collision or sudden stop.

REAR WINDOW DEFROSTER

The rear defroster control is located on the climate control panel and works to clear the rear window of fog and thin ice.

The ignition must be in the 3 (RUN) position to operate the rear window defroster.

The rear defroster turns off automatically after 10 minutes or when the ignition is turned to the 1 (LOCK) position. To manually turn off the defroster before 10 minutes have passed, push the control again.

Do not use razor blades or other sharp objects to clean the inside of the rear window or to remove decals from the inside of the rear window. This may cause damage to the heated grid lines and will not be covered by your warranty.